


## Pacbrake Exhaust Brake Wiring Schematic For:

### CUMMINS M11, M11 Plus, ISM with DV670 ECU

For vehicles (without) Allison WT Transmission (without) ABS braking (with) on-board air system

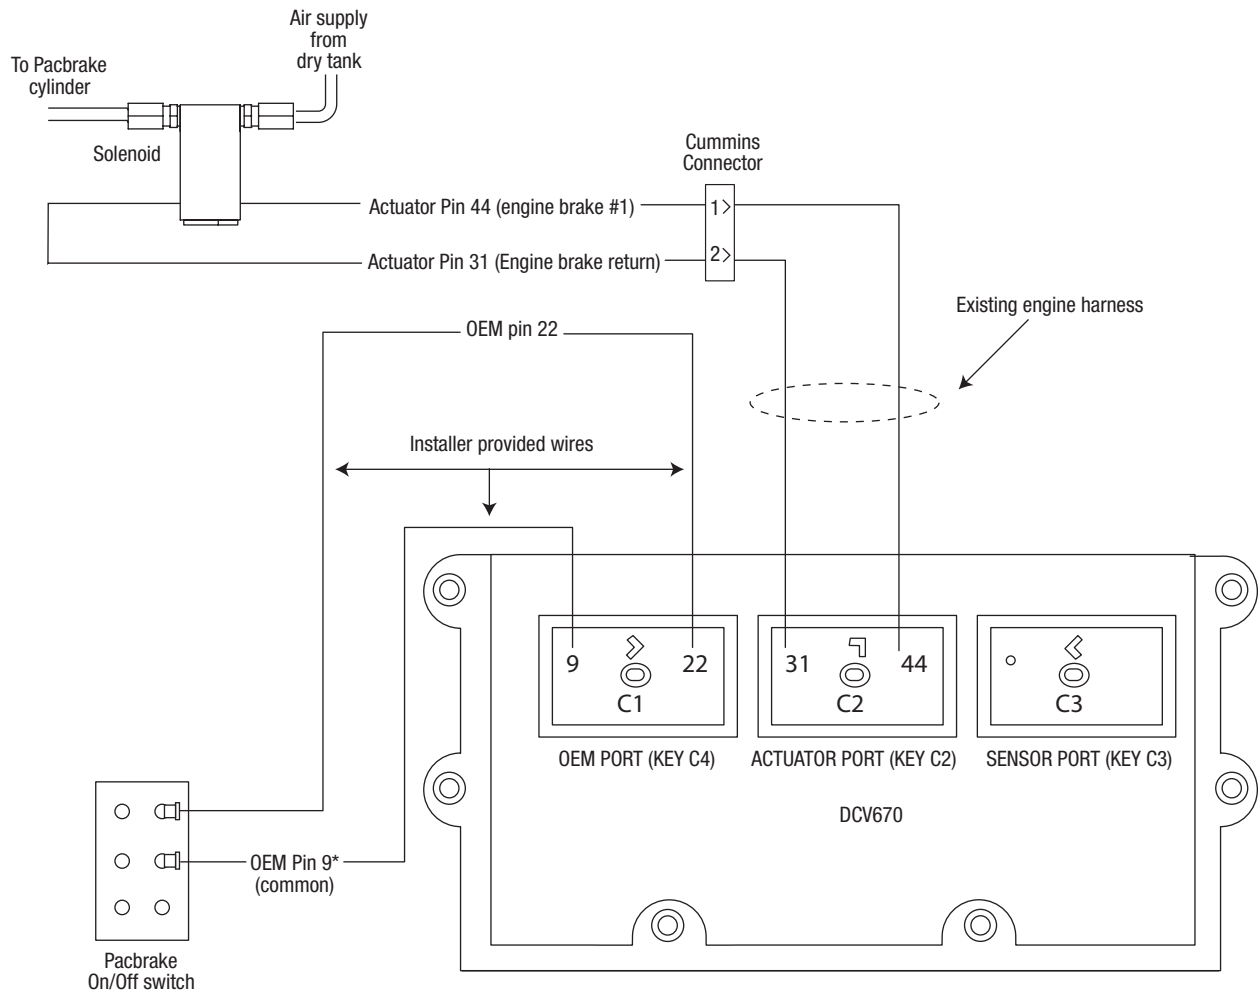

#### NOTE:

- \*Pin 10 or 19 can be used as alternates to Pin 9 for common ground.
- OEM port pin #9 to on/off switch.
- OEM port pin #22 from on/off switch.
- Actuator port pin #44 to Pacbrake solenoid (either wire at solenoid).
- Actuator port pin #31 to Pacbrake solenoid (remaining wire at solenoid).
- Information for this schematic was derived from vehicle systems at the date of this printing.
- Updates or variations by vehicle manufacturers constituting changes will not be the responsibility of Pacbrake.

NOTE: Ignition power must be capable of 12VDC 20 amps.

NOTE: Information for this schematic was derived from vehicle systems at the date of this printing.

Updates or variations by vehicle manufacturers constituting changes will not be the responsibility of Pacbrake.