


Subject: C11022 Combined Remote Breather Kit For Cylinder and Compressor

ATTENTION: This kit will require installer to reuse inlet air filter and nylon tube that originally came with compressor.

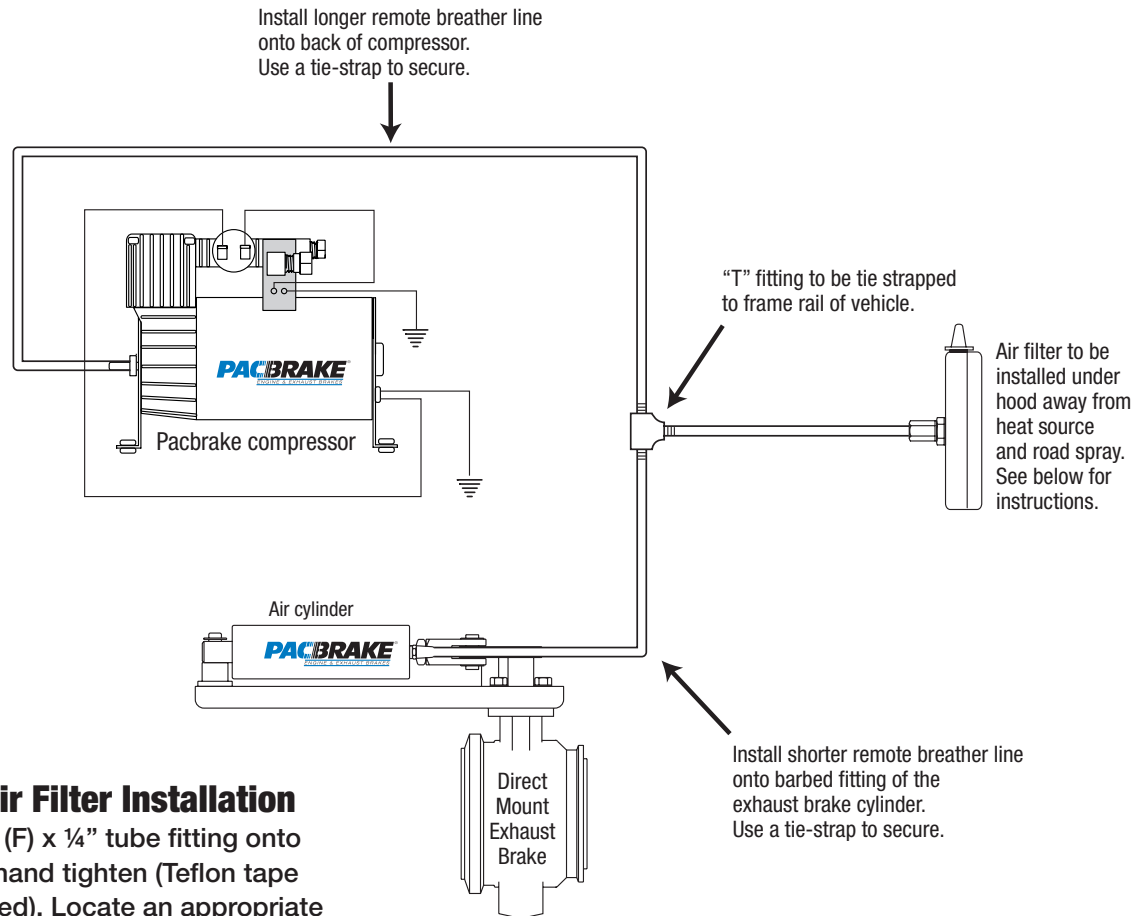

Remote Inlet Air Filter Installation

Install the 1/4" NPT (F) x 1/4" tube fitting onto inlet air filter, and hand tighten (Teflon tape is not recommended). Locate an appropriate area where remote inlet filter is to be installed. Keep in mind the location should be dry and away from any heat source, and air inlet slots on the inlet air filter are free from blockage, and are facing downward. Drill a 3/8" mounting hole. Push remote filter bracket pin into hole. Route the nylon air line. Measure and cut to appropriate length, and attach to remote inlet air filter. When routing air line tubing, always remember to avoid sharp edges, heat sources and tight bends (Air line must be routed at least 12" away from exhaust system and components).

